RadioShack

Bilingual Laptop

60-2632

Quick Start Guide

for installing, setting up and using your new product

Step One

Installing Batteries

1. Remove the battery compartment cover.

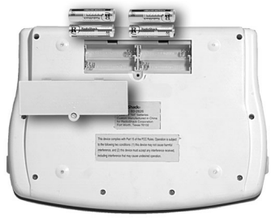

2. Install four AA batteries (not supplied) as indicated by the polarity symbols.

3. Replace the cover and tighten the screw.

Using an AC or DC Adapter

1. Set the adapter's voltage switch to 6V.

2. Attach a size M Adaptaplug™ to the adapter's cord with the switch set to positive (+).

3. Insert the adapter's barrel plug into the laptop's **DC 6V** jack. Plug the other end into the power source.

Step Two

Using Your Laptop

1. Place the laptop on a flat surface and press the release buttons to unlock and lift the cover.

2. Press **ON/MODE** to turn on the laptop. You are prompted to select a language.

3. Press **E** for English or **S** for Spanish. Press **ENTER**.

4. When you finish using the laptop, press **OFF**. Fold the cover down until it locks into place.

Step Three

Selecting an Activity

1. Press **ON/MODE** to select an activity. The Category Selection Menu (**Vocabulary/Grammar**, **Mathematics**, **Music/Drawing**, **Game/Amusement**) appears.

2. Type in the activity number, or use the arrow keys to scroll and select the desired activity. Then press **ENTER**.

3. If you want to go to another activity before finishing the existing activity, press **ON/MODE** to go back to the Category Selection Menu and select another activity.

What's Included

- Bilingual Laptop
- Working Mouse

©2003. RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

60-2632
Printed in China
05A03